How To Use the Relay Attenuator With Volumio

1. Install the Relay Volume Attenuator Plugin

VOLUMIO		к (р) н	0
Plugins		Ç	
🖋 Plugins Management			
Installed Plagins Search Plagins	Upload Plagin		
Music Services	ල් Touch Display Plugin		
System Tools Accessories	This Plagin shows Volumic's UI to whatever 0 Author/Volumio Team	lipplay attached to the device. It is expectally optimized for the 7" Raspherry PT display.	Updaved 15-10-2014
	Q Allo Relay Volume Attenuator	and an and the second	
	This plugin enables Allo's Relay Volume Atten	whor	
	Author/Velueto Team		Updated 30-8-2017
	Browse	O Playback	E Queue

2. Enable the Relay Volume Attenuator Plugin

VOLUMIO		K (>) H		۰
Plugins		Ŭ		
Plugins Management				
Installed Physics Search Physics	Upload Plagin			
4) Allo Relay Volume Attenuator		• Active	Settings Universal	
	and a second sec			
Malles Lucie Cold				
5	Browse	O Playback	🗮 Queue	

3. If you want to map the 64 steps to 100, or see the user manual, just go to Relay Volume Attenuator Plugin settings

VOLUMIO	н 🕞 н	0
Allo Relay Volume Attenuator Optic	ons	
< Back to Plugins		
🖋 Settings		
Map Volume To 100	0	
	Sile	
		and the second
Resources		
Get Yours On Volumio Shop	Get yours on Velamio Shop	
User Manual	User Manual	
Tech Manual	Tech Manual	
Without side and shares		
🎵 Browse	O Playback	🗮 Queue

- 4. To use it with Piano, Piano 2.1, Boss DAC: simply plug it on top of them, and enable the DAC. It is suggested to set Volume of the DAC to 100 before enabling the Allo Relay Volume Attenuator Plugin and to set the Piano 2.1 in dual stereo mode.
- 5. To use it with any analog source: simply plug the analog output you want to control in the inputs of Allo Relay Attenuator and connect its output to your amplifier. This is extremely useful is your USB DAC does not have Hardware Volume control, and you use it with your Raspberry PI. Please note: to use the Allo Relay Attenuator directly on the Raspberry PI you need GPIO spacers, since the Allo Relay Volume Attenuator is not HAT compliant.