

A-Star 328PB Micro 5V/16MHz - ATmega328 module - Pololu 3160

Minicomputer User Manual

PLL-11110

[A-Star 328PB Micro 5V/16MHz - ATmega328 module - Pololu 3160](#)

1. Usage Information and Warnings

1. The device should operate in conditions consistent with its intended use.
2. Avoid improper connection of wires. Incorrect connection may lead to short circuits and damage to the equipment.
3. To ensure proper operation of the equipment, provide it with an appropriate power source according to its specifications.
4. Do not directly touch unprotected parts of the equipment, as this may lead to short circuits or the transfer of electrostatic charges.
5. Operating in high humidity environments can affect the operation of the electronics, leading to damage and errors in sensor readings.

2. Unpacking and Assembly

1. **Unpacking** - checking the completeness of the set and the condition of the elements.
2. **Connection** - plugging in the necessary elements to the minicomputer's connectors.
3. **Operating System** - uploading the operating system to the data carrier.
4. **Startup and Configuration** - configuring the minicomputer settings.

3. Intended Use

The product is intended for use within the parameter ranges specified by the manufacturer and should be used only by qualified personnel trained to operate this product. Before each use, check the product for damage and do not use it if any defects are found. Failure to follow the manufacturer's guidelines may cause potential product damage.

4. Technical Specification

Product Code	PLL-11110
EAN13	5903351240048
Weight:	0.005000 kg
Dimensions	Width:8.3, Height:0.6, Depth:7.5 cm
UC - Microcontroller	ATmega328
UC - Digital pins	24

UC - PWM	9
UC - analog in	8
UC - freq	16 MHz
UC - Flash	32 kB
UC - RAM	2 kB
UC - USB	none
UC - EEPROM	1 kB
UC - Core	8-bit AVR
UC - A/C	10-bit
UC - core	1. Single Core
UC - UART	yes
UC - I2C	yes
UC - SPI interface	yes
Voltage to	3.8 V
Voltage from	15.0 V
Voltage output from	3.3 V
Output voltage to	3.3 V
Nominal output voltage	3.3 V

5. Contact Information

For product-related questions, please contact an authorized service center or the manufacturer:

- **Importer:** Botland. B. Derkacz Sp. K.
- **Address:** Gola 25, 63-640 Bralin
- **Phone Number:** 62 593 10 54
- **Website address:** www.botland.store